 
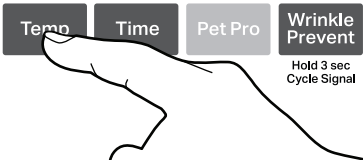 


GUÍA DE IN

PANEL DE CONTROL Y FUNCIONES

Paso 1. Limpie el filtro de pelusa **Paso 2. Cargue la ropa y cierre la puerta**

Paso 2. Cargue la ropa y cierre la puerta

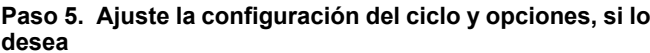

- TIME (Tiempo)** (Air Only [Solo aire], Timed Dry [Secado programado] y Quick Dry Only [Solo secado rápido])
- Presione para modificar el tiempo para los ciclos programados entre 15, 30, 60 y 90 minutos.

WRINKLE PREVENT (Prevención de arrugas)
Cycle Signal (Señal de ciclo)


Vea las siguientes notas para ver cómo encender/apagar estos modificadores.

WRINKLE PREVENT (Prevención de arrugas)
Si no pudiera sacar la carga inmediatamente, active esta opción para añadir 150 minutos de rotación periódica para ayudar a disminuir la posibilidad de que se formen arrugas cuando el ciclo termine. Apague o encienda este modificador con solo oprimir un botón.

CYCLE SIGNAL (Señal de ciclo)
Use esta opción para encender o apagar la señal de finalización del ciclo de secado. Encienda o apague este modificador manteniendo presionado el botón hasta que la luz de la señal de Silenciar señal del ciclo se encienda o apague.

NOTA: Las certificaciones de energía gubernamentales de esta secadora de ropa se basaron en el ciclo Timed Dry Cycle (Secado programado), y los ajustes Maximum Drying Temperature (Temperatura de secado máximo) y Maximum Dry Time (Tiempo de secado máximo). Se utilizaron los valores predeterminados de Nivel de secado normal y la opción Wrinkle Prevent (Protección contra arrugas) desactivada.

SPECIALITY CYCLE (Ciclo de especialidad)

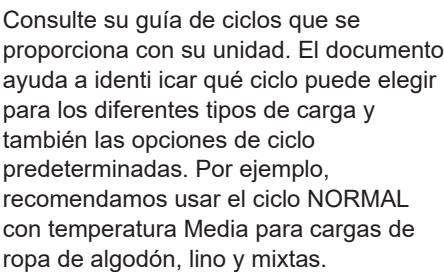

WRINKLE CONTROL (Control de arrugas):


Este ciclo está diseñado para ayudar a eliminar o disminuir las arrugas, este ciclo es excelente para prendas de planchado permanente. El ciclo de la secadora utiliza calor bajo y un periodo de enfriamiento para evitar que las prendas se arruguen.

STEAM REFRESH (Revitalizado con vapor):

Este ciclo es ideal para reducir las arrugas y los olores de las prendas secas. Este ciclo es excelente para revitalizar una prenda arrugada o cuando se deja una carga en la secadora por demasiado tiempo.

Para obtener instrucciones de instalación e información sobre mantenimiento, almacenamiento durante el invierno y sugerencias sobre transporte, consulte el Manual del propietario que viene incluido con su electrodoméstico.

Paso 6. Mantenga presionado y luego suelte el botón de inicio

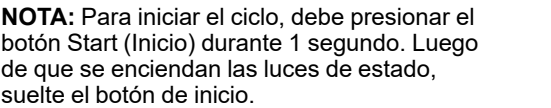

** No todos los ciclos, ajustes u opciones están disponibles con todos los modelos.*

IMPORTANTE: Guarde esta guía para uso a futuro.

QUICK START GUIDE MAYTAG DRYER

CONTROL PANEL AND FEATURES

OPERATING INSTRUCTIONS

WARNING



Fire Hazard

No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.
Failure to follow these instructions can result in death or fire.

WARNING




Explosion Hazard


Keep flammable materials and vapors, such as gasoline, away from dryer.
Do not dry anything that has ever had anything flammable on it (even after washing).
Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Step 1. Clean Lint Screen

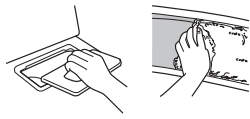


Step 2. Load Clothes; then Close Door

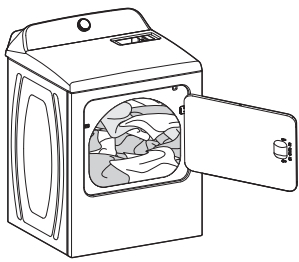

Step 3. Press Power Button





Step 4. Select the desired cycle for your load*

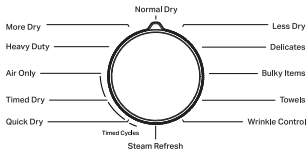

Step 5. Adjust cycle settings and options, if desired



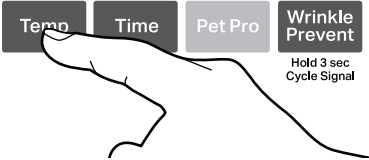

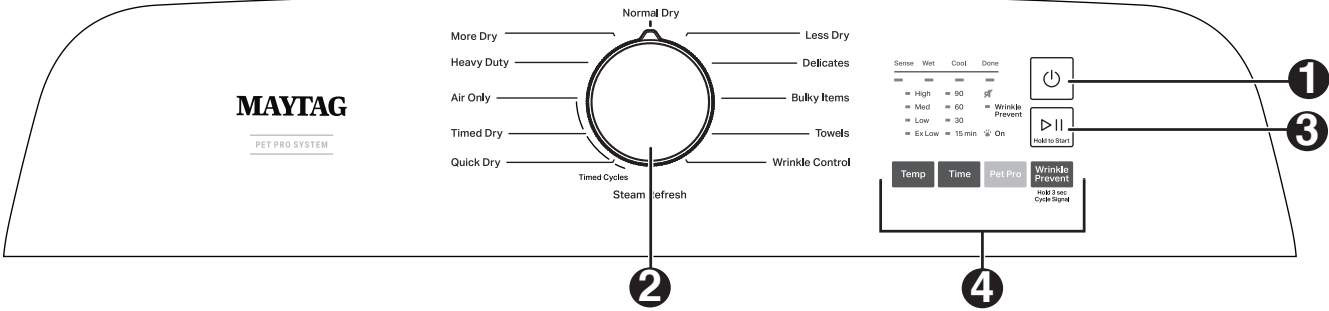

**Not all features, cycles, and options are available on all models. Appearance may vary.*

1. POWER

Press to turn On/Off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.

NOTE: Your dryer comes with two types of cycles - Sensor drying cycles and Timed drying cycles.

Sensor drying cycles - Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

Timed Drying cycles - n these cycles, you can specify the drying time. Time options available are 15, 30, 60 and 90 minutes. For a complete list of all cycles, please refer to the cycle guide document.

3. START/PAUSE

Press and hold the **Start/Pause** button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle.

4. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMP

Press to modify the cycle's available temperature. (Extra Low, Low, Medium, and High)

TIME (Air Only, Timed Dry, and Quick Dry Only)

Press to modify the time for the timed cycle between 15, 30, 60, and 90 minutes.

PET PRO

Select this option to boost pet hair removal performance. Air tumble time is added to the end of the cycle. The heating system is turned off during this time to protect clothing from over drying.

NOTE: Pet Pro modifier is intended for removing pet hair from clothes. Do not put pets into the Dryer.

WRINKLE PREVENT (Cycle Signal)

See notes below for how to turn these modifiers on/off.

WRINKLE PREVENT

If you will be unable to remove a load immediately, activate this option to add 150 minutes of periodic tumbling to help reduce wrinkles from forming after the cycle completes. Turn this modifier on/off with a single button press


CYCLE SIGNAL

Use this option to turn the end of drying cycle signal on or off.

Turn this modifier on/off by holding the button until the Mute Cycle Signal light turns on/off.

NOTE: These clothes dryer's Government energy certifications were based on the Timed Dry Cycle, Maximum Drying Temperature and Maximum Dry Time Settings. The as-shipped defaults of Normal Dryness, Wrinkle Shield off, were used.

CHOOSING THE RIGHT CYCLE

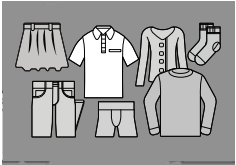

Refer to your Cycle Guide, provided with unit. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

SPECIALITY CYCLE

WRINKLE CONTROL:

This cycle is designed to help remove or reduce wrinkles, this cycle is great for permanent press clothing. The dryer cycle uses low heat and a cool down period to keep clothes from wrinkling or creasing.

STEAM REFRESH:

This cycle is best for reducing wrinkles and odors from dry items. This cycle is great to refresh a wrinkled garment or when a load was left in the dryer too long.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

Step 6. Press, Hold, and Release Start Button



NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

**Not all cycles, settings or options are available with all models.*

IMPORTANT: Retain this guide for future use.

W11711681A
01/24

©2024 Todos los derechos reservados.
All rights reserved.



19-Jan-2024 08:00:30 EST | RELEASED

In some European factories the letter "W" of the part code mentioned herein will be automatically replaced by the number "4000" (e.g. "W12345678" becomes "400012345678")