

QUICK START GUIDE
MAYTAG TOP LOADING WASHING MACHINE
CONTROL PANEL AND FEATURES

OPERATING INSTRUCTIONS

⚠️

WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

WARNING: Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

STEP 1. SORT & LOAD LAUNDRY

See Loading Recommendation section below.

STEP 2. ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS*

Remove inside tray for powder HE detergent.

Follow manufacturer's instructions to determine amount of laundry products to use.

STEP 3. PRESS POWER BUTTON TO TURN ON THE WASHER

STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

STEP 5. ADJUST CYCLE SETTINGS AND SELECT ADDITIONAL OPTIONS*

STEP 6. PRESS, HOLD, AND RELEASE HOLD TO START BUTTON TO BEGIN CYCLE

***NOTE:** Not all cycles, settings or options are available with all models.

LOADING RECOMMENDATION

For best performance, it is recommended to load items by dropping them in loose heaps evenly around the washplate and agitator. Do not lay items length-wise around the washplate or agitator.

ADDING LIQUID CHLORINE BLEACH


Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or oxi products in the same cycle with liquid chlorine bleach.

CHOOSING THE RIGHT CYCLE

A cycle guide for your washer can be found online at www.maytag.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Warm water for cottons, linens and mixed garment loads.

PRE-TREATING BEFORE A WASH CYCLE

- Press the Faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high. Water will also drain after 10 minutes if the lid is left open or 3 hours if the lid is left closed.

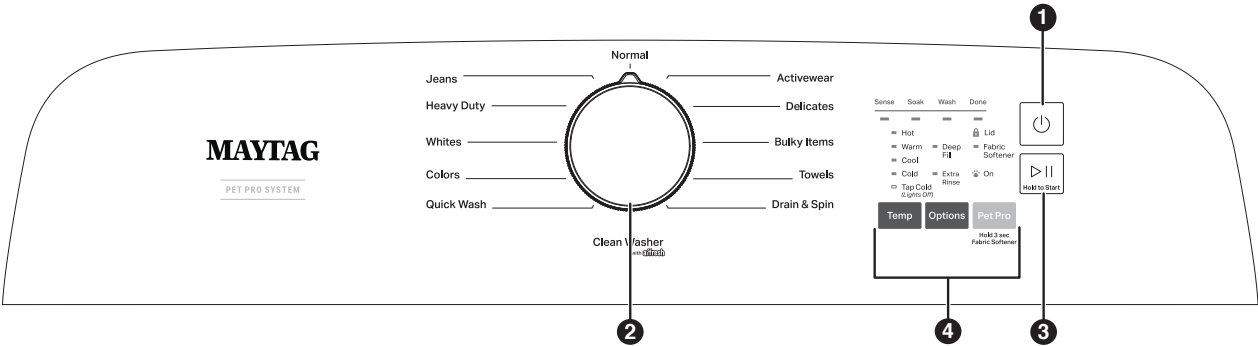

Appearance may vary depending on model.

- 1 POWER**
Press to turn on/off or to stop/cancel a cycle.

2 CYCLE KNOB
Turn knob to select desired cycle. See “Cycle Guide” online for detailed cycle descriptions.

3 START/PAUSE
Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle and unlock lid.
NOTE: If machine is spinning it may take longer to unlock lid.


4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

Temp
Press “Temp” button to modify the cycle's available temperatures (Tap Cold, Cold, Cool, Warm, Hot).
NOTE: Pressing Temp will toggle through available temperature options. When no lights in the temperature column are illuminated the selected temperature is Tap Cold.

Options
Press to add or remove options for each cycle. Press once to add an Extra Rinse, twice to activate Deep Water and three times for both.
Extra Rinse
Select this option to add a second rinse.
Deep Fill
Use this option to automatically add more water to your wash cycle. You can also use this option to reduce the likelihood of white residue on dark clothing.

Pet Pro (Fabric Softener)
See notes below for how to turn these modifiers on/off.
Pet Pro
Select this option to boost pet hair filtering performance. You can use this mode anytime but it's especially suited for loads with high amounts of pet hair. Turn this modifier on/off with a single button
- press. For some load sizes “Pet Pro” must be selected in order to collect hair.
NOTE: Pet Pro modifier is intended for removing pet hair from clothes. Do not put pets into the Washer.

Fabric Softener
Select this option to let the machine know when you have added liquid fabric softener. Turn this modifier on/off by holding the button until the fabric softener light turns on/off.

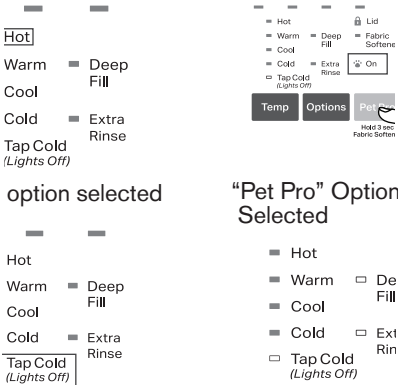


When no lights in the temperature column are illuminated the selected temperature is “Tap Cold”

When lights are not illuminated, default cycle settings are selected

NOTE: If the washer detects an out-of-balance condition it may pause and attempt to correct the situation. During this time the Sense and Wash status indicators will both briefly illuminate.


PET HAIR FILTER

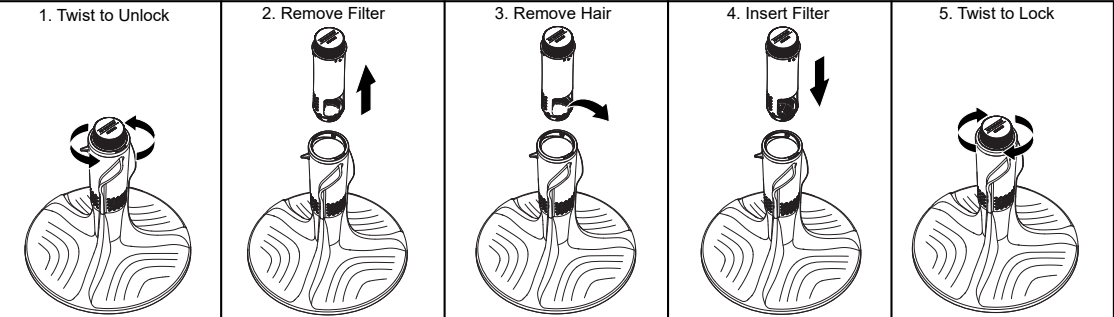

- Filter must be installed in the agitator during the cycle to capture hair.
- Filter is intended to be emptied between each cycle. If filter is not emptied between loads then collected material will build up and decrease the efficiency of the filter in future cycles.
- Filter may collect hair whenever it is installed but it works best when the Pet Pro modifier is turned on.

USING THE PET HAIR FILTER

- Grab the cap and twist to unlock. Remove the filter and empty collected material out of the filter cup.
- Reinsert the Filter and twist to lock before beginning the next cycle.

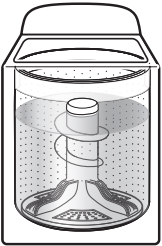

AUTO SENSING AND DEEP FILL

- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Press Deep Fill to automatically add more water to your wash cycle.
- It is recommended to use BULKY ITEMS cycle with Deep Fill option for loads where maximum water level is desired.
- Expect longer cycle times due to extended fill duration when using the Deep Fill option.



CLEANING WITH LESS WATER

The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources. As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

To access the full cycle guide, warranty details, detailed product dimensions, visit www.maytag.com/owners (U.S.A), or www.maytag.mx/ (Mexico). This may save you the cost of a service call.						
REGISTER PRODUCT	SCHEDULE SERVICE	TROUBLESHOOTING	MANUALS & DOWNLOADS	ADD SERVICE PLAN	PARTS	ACCESSORIES
		To speak with a customer service representative or if you have additional questions, call us toll free at 1-800-344-1274 or in Mexico call +52 (81) 8329-2100 . You can write with any questions or concerns at: Maytag Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Maytag Brand Appliances Customer eXperience Center Miguel Aleman 30 66634 Cdad. Appodaca, N.L. Please include a daytime phone number in your correspondence.				

