

KitchenAid®

30" DUAL FUEL SLIDE-IN
GAS COOKTOP
ELECTRIC CONVECTION OVEN




COOKTOP, BURNER AND GRATE PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	4166262	Nut, Hex (3)	16		Cap, Semi Rapid Small (2)
1	3185974	Cooktop, Glass White	8	3185817	Bezel, Cooktop (Small) White		3185797	White
	3185972	Black		3185815	Black		3185796	Black
	3185973	Almond		3185816	Almond (Includes Illus. 7 and 9)		3185795	Almond
2		Grommet, Glass Cooktop (4)	9	3181658	Gasket, Burner (Small)	17		Burner (2)
	3180081	White	13		Grate, Large (RF & LR) White		3182568	White
	3180079	Black		3186598	Black		3182567	Black
	3180080	Almond		3178940	Almond		3182569	Almond
3		Bezel, Cooktop (Large)	14		Grate (Small) (LF & RR) White	18	3185821	Burner, Small Sealed
	3185820	White		3186600	Black	19	3185822	Burner, Large Sealed
	3185818	Black		3178943	Almond	23		Cover, Vent
	3185819	Almond (Includes Illus. 5 and 7)	15		Cap, Rapid Burner Large (2)		3182497	White
5	3181659	Gasket, Burner (Large)		3185794	White		3182496	Black
				3185793	Black		3182498	Almond
				3185792	Almond			

SEALED GAS ASSEMBLY

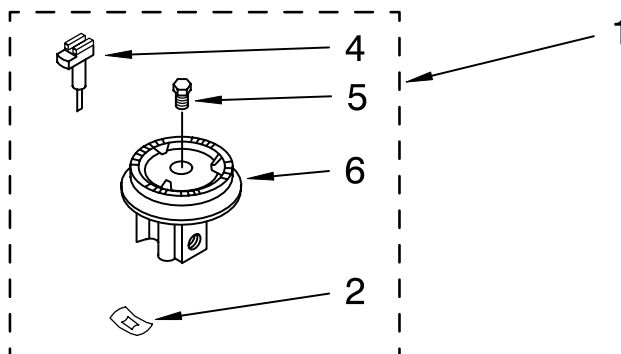


Illus. No.	Part No.	DESCRIPTION
1		Sealed Gas Burner Assembly
	814244	Large Burner
	814245	Small Burner
2	3185805	Nut
4	3185804	Electrode
5		Orifice, Burner
	3185947	Small Burner
	3185948	Large Burner
6		Burner, Sealed
	3185821	Small Burner (Orifice Included)
	3185822	Large Burner (Orifice Included)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BURNER BOX, GAS VALVES, AND SWITCHES

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

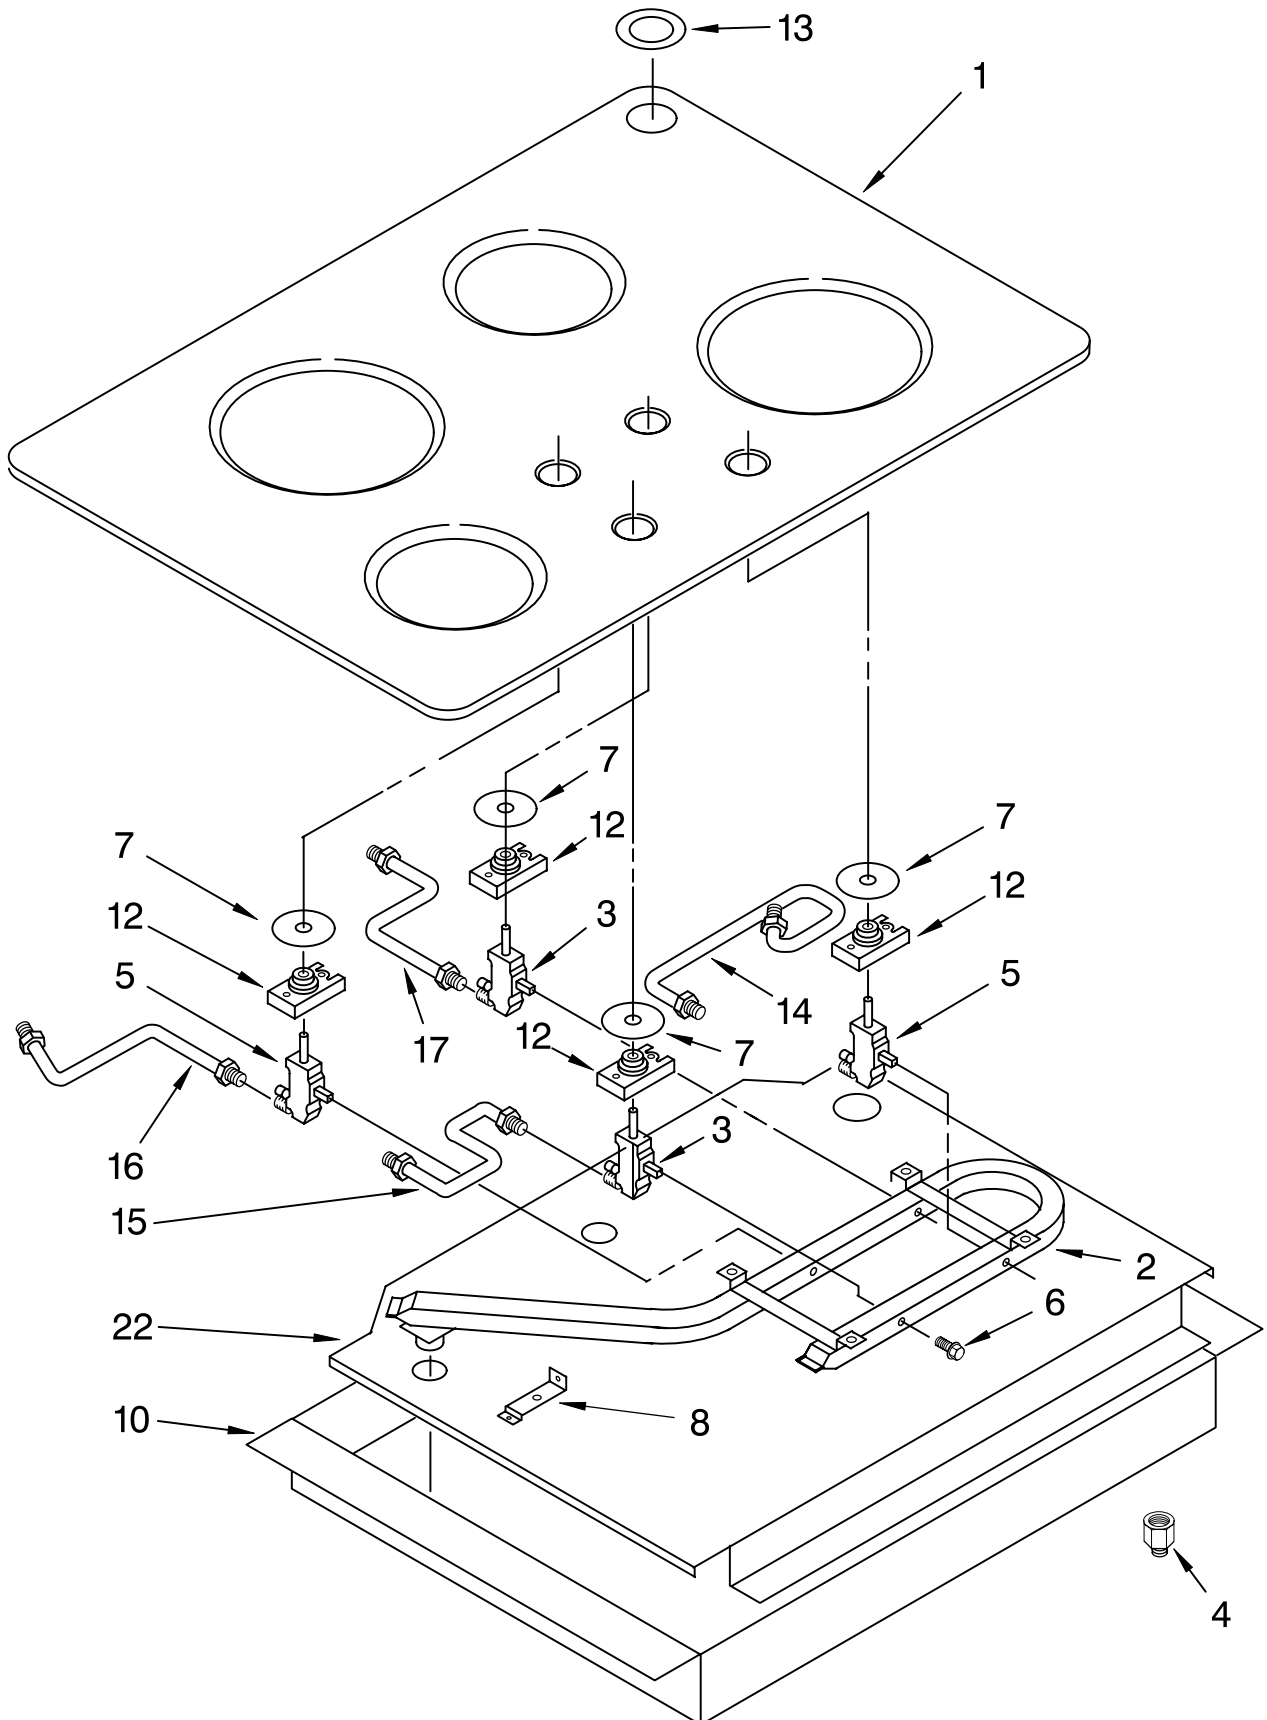

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BURNER BOX, GAS VALVES, AND SWITCHES

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			6	3185829	Bolt (Gas Valve)	15	3186690	Tubing, Small Gas Burner (LF)
1	3188911	Backer, Plate	7	3188425	Seal, Shaft (4)	16	3186692	Tubing, Large Gas Burner (LR)
2	3189301	Pipe, Manifold	8	3188531	Bracket Manifold	17	3186691	Tubing, Small Gas Burner (RR)
3	3185828	Valve, Gas Burner (LF & RR)		4159603	Washer	22	3188530	Bracket, Cooktop Protector, Edge
4	3187000	Fitting, Manifold Pipe	10	3187708	Box Burner		3147758	
5	3185827	Valve, Gas Burner (RF & LR)	12	3185830	Switch, Gas Burner			
			13	3187523	Seal, Tube			
			14	3186689	Tubing, Large Gas Burner (RF)			

PARTS NOT ILLUSTRATED

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**FOLLOWING PARTS
NOT ILLUSTRATED**

SPLICING WIRES--25FT.

LENGTH


Miscellaneous

4175461 LP Gas Conversion
3149157 Tie, Cable
3347868 Tie, Cable

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

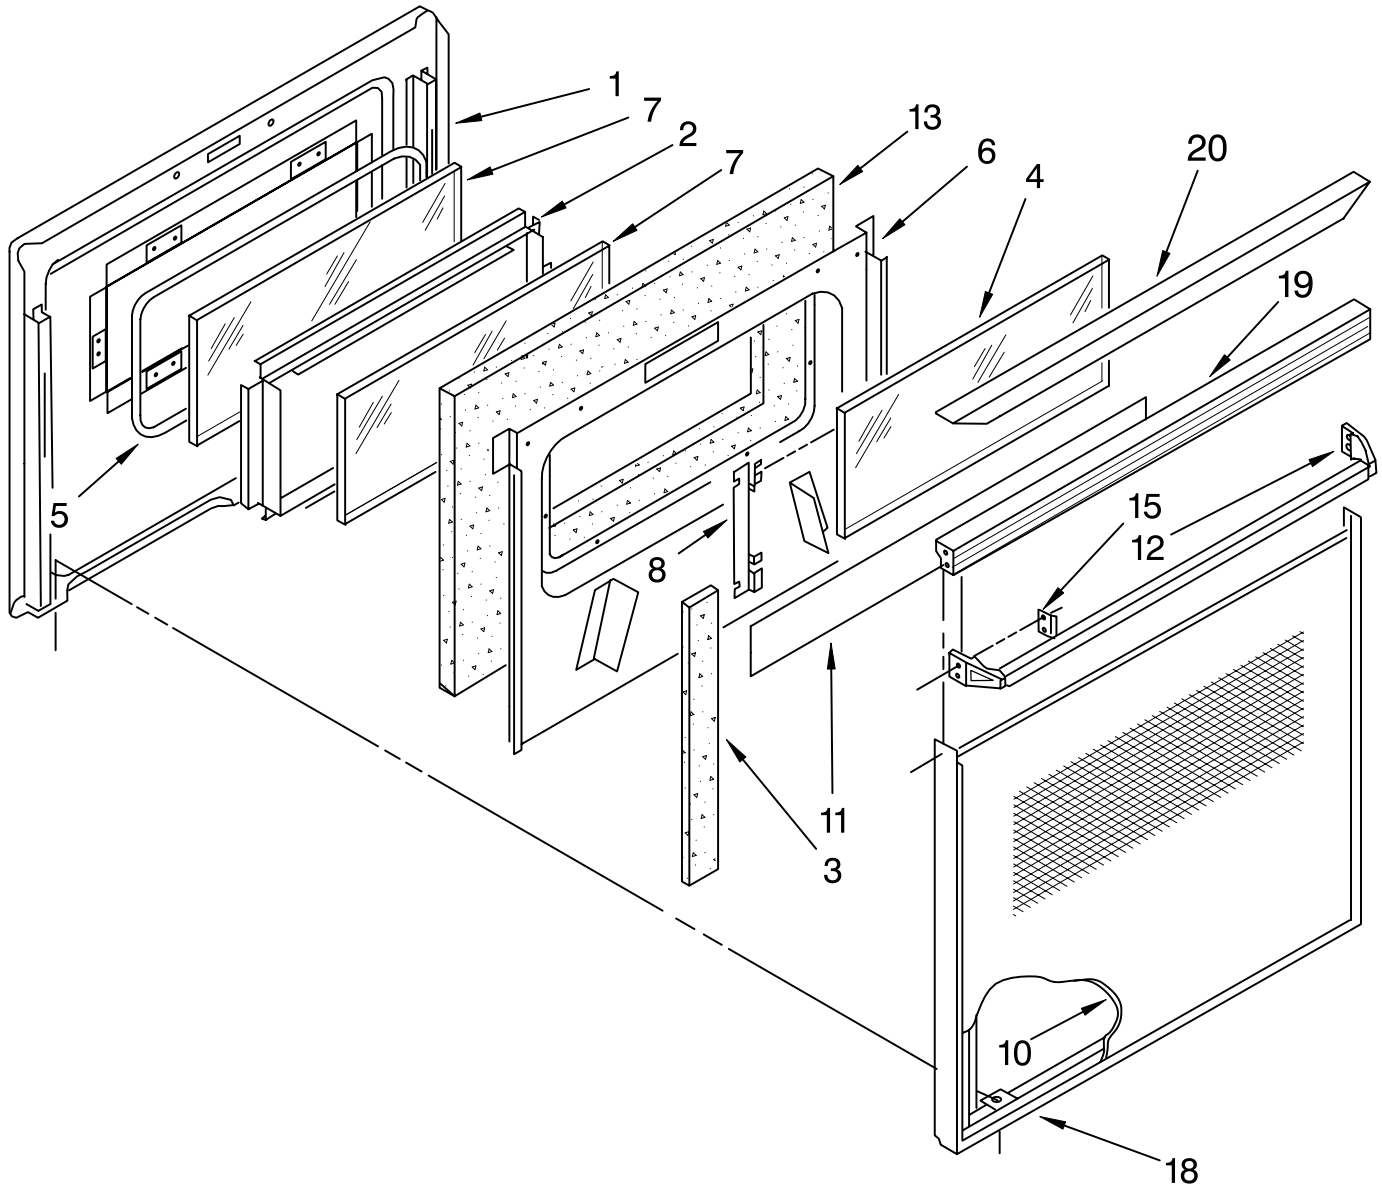


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			6	3148159	Retainer, Insulation	13	3147951	Insulation
1	3172218	Liner, Door		4173601	Screw	15	3148282	Pad, Handle Mtg.
2	3148234	Frame, Window	7	3169203	Glass, Outer & Inner		3185918	Screw
	3185647	Screw, (6)	8	3188720	Retainer, Glass (2)		3149333	Screw
3	3148441	Seal, Flange (2)	10		Glass, Panel	18	3148235	Frame
	3148443	Screw (6)		3188052	Black	19		Door Top
4	3169202	Glass, Clear		3188050	White		3148223	Black Model
	3185647	Screw		3188051	Almond		3149355	White Or Almond Model
5	3148183	Seal, Window	11	3188706	Foil	20	3181363	Cap, Top (White Or Almond Model)
			12		Handle, Oven Door		3149333	Screw (3)
				3186524	Black			
				3186525	White			
				3186526	Almond			
				355515	Screw (4)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

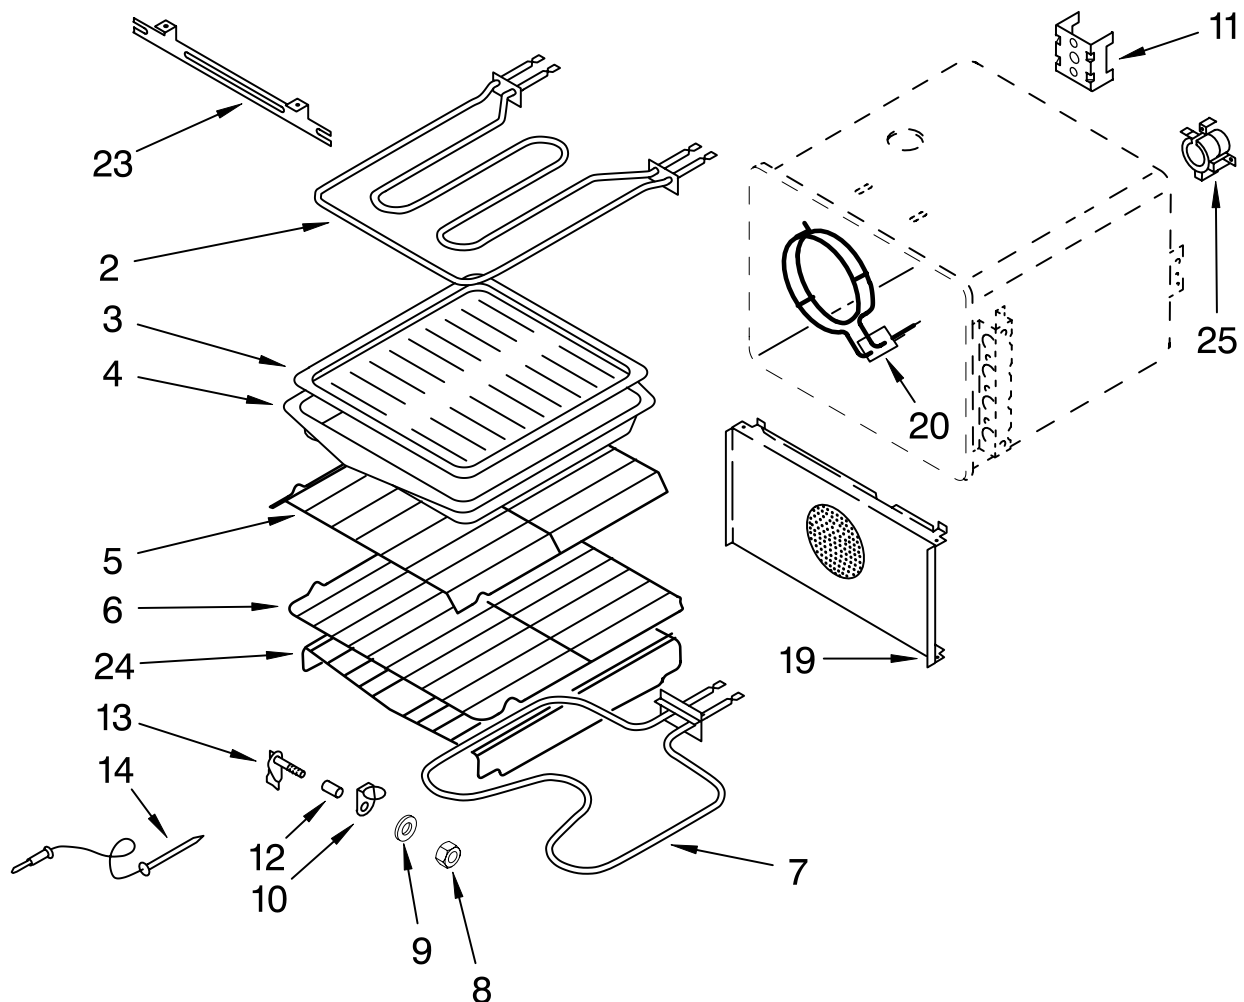

Illus. No.	Part No.	DESCRIPTION
2	3182451	Element, Broil
	3150532	Screw (2)
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181639	Rack, Offset
6	3181638	Rack, Straight
7	661416	Element, Bake
	3150532	Screw (2)


Illus. No.	Part No.	DESCRIPTION
8	4167277	Nut, Meat Probe
9	4163975	Gasket, Meat Probe
10	4167266	Cover, Probe
11	3182042	Bracket, Support Motor
12	3179672	Spacer, Tubing
13	3150107	Jack, Meat Probe
14	3150144	Meat Probe

Illus. No.	Part No.	DESCRIPTION
19	3181724	Cover, Fan
	3179117	Screw (6)
20	661460	Element, Convection
	3179117	Screw (3)
23	3180694	Bracket, Element
	3179117	Screw (2)
24	3181534	Rack, Roasting
25	3149653	SPST Thermostat
	3148107	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

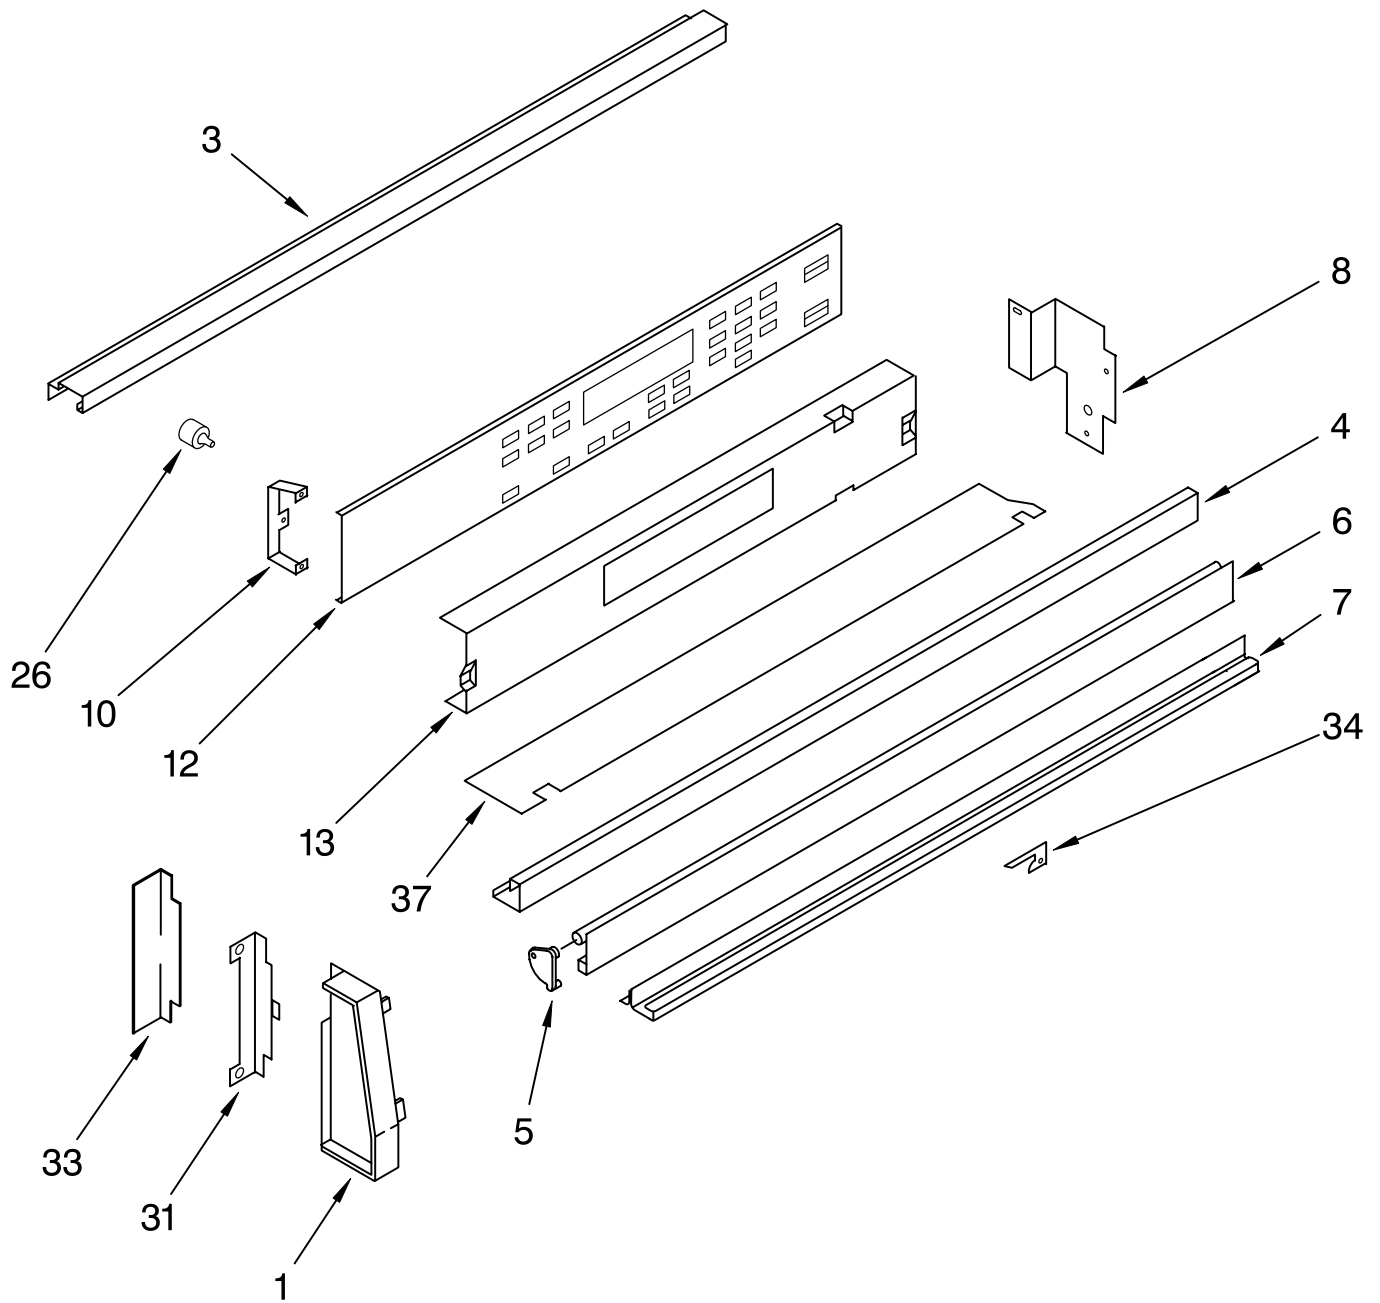

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			5		End Trim, R.H. Vent Door	12	3187099	Microcomputer
				3148698	Black	13		Control Panel
				3148472	Brite Aluminum		3186988	Black
					End Trim, L.H.		3186989	White
					Vent Door		3186990	Almond
1		End Cap, L.H.		3148697	Black		308605	Strain Relief
	3150728	Black		3148471	Brite Aluminum		98520	Screw
	3150730	White			Vent Door	26	3183328	Bumper, Rubber (4)
	3150732	Almond	6		Black	31	3183317	Brace, Control
		End Cap R.H.		314190	Black			Bracket
	3150729	Black		3149676	Brushed Chrome	33		Trim, End Cap
	3150731	White	7	314184	Trim, Bottom		3149900	Black
	3150733	Almond		342043	Screw		3149901	White
	3148905	Washer, Silicone	8		Bracket, Control		3149902	Almond
3		Rail, Top			Panel	34	3149142	Shield – Air
	3183329	Black		3184731	Left Side		254225	Screw
	3183341	Brite Aluminum		3184732	Right Side	37	3183992	Shield, Control
	254217	Screw	10	3183316	Bracket, Control			
4		Trim, Center			Panel (2)			
	3183366	Black		98520	Screw (4)			
	3183367	Brite Aluminum						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

(Black) (White) (Almond)

This exploded view diagram illustrates the assembly of a refrigerator. The main components are labeled with numbers 1 through 56. The diagram shows the internal structure, including the evaporator coils (1), condenser coils (2), and the compressor (3). The door assembly (4) is shown with its internal components, including the door hinge (5) and the door handle (6). The door handle is shown in three color options: (Black), (White), and (Almond). The door handle is attached to the door panel (7) using a handle bracket (8) and a handle screw (9). The door panel is shown with a handle cutout (10) and a handle slot (11). The door panel is attached to the main body of the refrigerator using a door hinge (12) and a door hinge pin (13). The main body of the refrigerator is shown with a top panel (14) and a bottom panel (15). The top panel is attached to the main body using a top panel screw (16) and a top panel bracket (17). The bottom panel is attached to the main body using a bottom panel screw (18) and a bottom panel bracket (19). The main body of the refrigerator is shown with a front panel (20) and a back panel (21). The front panel is attached to the main body using a front panel screw (22) and a front panel bracket (23). The back panel is attached to the main body using a back panel screw (24) and a back panel bracket (25). The main body of the refrigerator is shown with a top panel (26) and a bottom panel (27). The top panel is attached to the main body using a top panel screw (28) and a top panel bracket (29). The bottom panel is attached to the main body using a bottom panel screw (30) and a bottom panel bracket (31). The main body of the refrigerator is shown with a front panel (32) and a back panel (33). The front panel is attached to the main body using a front panel screw (34) and a front panel bracket (35). The back panel is attached to the main body using a back panel screw (36) and a back panel bracket (37). The main body of the refrigerator is shown with a top panel (38) and a bottom panel (39). The top panel is attached to the main body using a top panel screw (40) and a top panel bracket (41). The bottom panel is attached to the main body using a bottom panel screw (42) and a bottom panel bracket (43). The main body of the refrigerator is shown with a front panel (44) and a back panel (45). The front panel is attached to the main body using a front panel screw (46) and a front panel bracket (47). The back panel is attached to the main body using a back panel screw (48) and a back panel bracket (49). The main body of the refrigerator is shown with a top panel (50) and a bottom panel (51). The top panel is attached to the main body using a top panel screw (52) and a top panel bracket (53). The bottom panel is attached to the main body using a bottom panel screw (54) and a bottom panel bracket (55). The main body of the refrigerator is shown with a front panel (56) and a back panel (57). The front panel is attached to the main body using a front panel screw (58) and a front panel bracket (59). The back panel is attached to the main body using a back panel screw (60) and a back panel bracket (61).

9

OVEN PARTS


For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			16	310659	Plate (Side Panel) (2)	38	3184039	Knob, Latch Handle
				308544	Screw, 10-24 x 1/2 (4)		3183294	Screw, 8 x 5/16
1	3176719	Front Frame	17	3185664	Channel Arm (2)	39	310345	Switch, Door
2	307985	Pin, Hinge Ear (2)	18	307986	Pin, Hinge (2)	40	3185197	Seal
3	309111	Snubber, Door (2)	19	307594	Ring, Retainer (2)	41	4454392	Spark Module
4	308306	Pushnut (2)	20	4159035	Bushing		3149333	Screw
5	3185944	Insulation Tray	21	308125	Anchor, Spring (2)		247326	Screw
6	3185954	Side Wrapper R.H.	22	308126	Spring, Oven Door (2)	42	3184853	Tube, Regulator
	3185957	Side Wrapper L.H.	23	3184741	Tube, Vent Extension	45	3148440	Sensor
7	311774	Support, Side Wrapper (4)		343641	Screw, 10-16 x 1/2	52	3182052	Back Panel
	3148107	Screw, #8 x 1/2 (4)	24	3186684	Smoke Eliminator		3148107	Screw, #8 x 1/2 (6)
8	311256	Insulation Baffle (2)		3179117	Screw (2)	53	258076	Terminal Block
	3148442	Screw, #6-20x1 1/4 (2)	25	4454407	Bracket, Spark Module		112432	Nut (3)
9	3183796	Baffle, Top Insulation	26	3184727	Cover, Spark Module		308043	Screw, 10-12 x 7/8 (2)
	3148107	Screw, #8 x 1/2 (4)	27	3187289	Bracket, Regulator	56	3185960	Cover, Rear
10	310685	Side Trim L.H.		254225	Screw		3148107	Screw, #8 x 1/2 (12)
	310689	Side Trim R.H.	28	3150505	Oven Light Assy.	FOLLOWING PARTS NOT ILLUSTRATED		
	3148107	Screw, #8 x 1/2 (8)		308043	Screw, 10-12 x 7/8 (2)	INSULATION		
	311932	Screw	29	311255	Bulb, Oven Light		310433	Insulation, Wrap
11	3182031	Oven (30" Pyro)	30	3184735	Panel, Kick		310435	Insulation, Oven
	311056	Screw (3)	31	3187205	Pressure Regulator		3149328	Insulation, Top
12	310713	Bracket, Oven Mounting (2)		3177991	Screw		3187218	Liner Adhesive
	343641	Screw, 10-16 x 1/2 (6)	32	310662	Coverplate	LITERATURE PARTS		
13	3185086	Plug Button		3179117	Screw (2)		LIT3187001	Tech Sheet
14	3184533	Gasket, Light	33	3187356	Latch Assembly		LIT3186508	Installation Instructions
15	3185662	Hinge Ear R.H.		311056	Screw (2)		LIT3188265	Use & Care Guide
	3185663	Hinge Ear L.H.	34	3178672	Safety Switch		LIT3150693	Cookbook
				98106	Screw (2)		LIT3187214	Instruction Insert
			35	309245	Insulator, Switch		LIT3183987	Auto Set Guide
			36	313035	Terminal, Shield			
				3148107	Screw #8 x 1/2			
				309258	Screw #6 x 3/8			
			37	310825	Latch Handle			
				308422	Screw, 10-24 x 1/2 (2)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UTILITY DRAWER AND RAIL PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

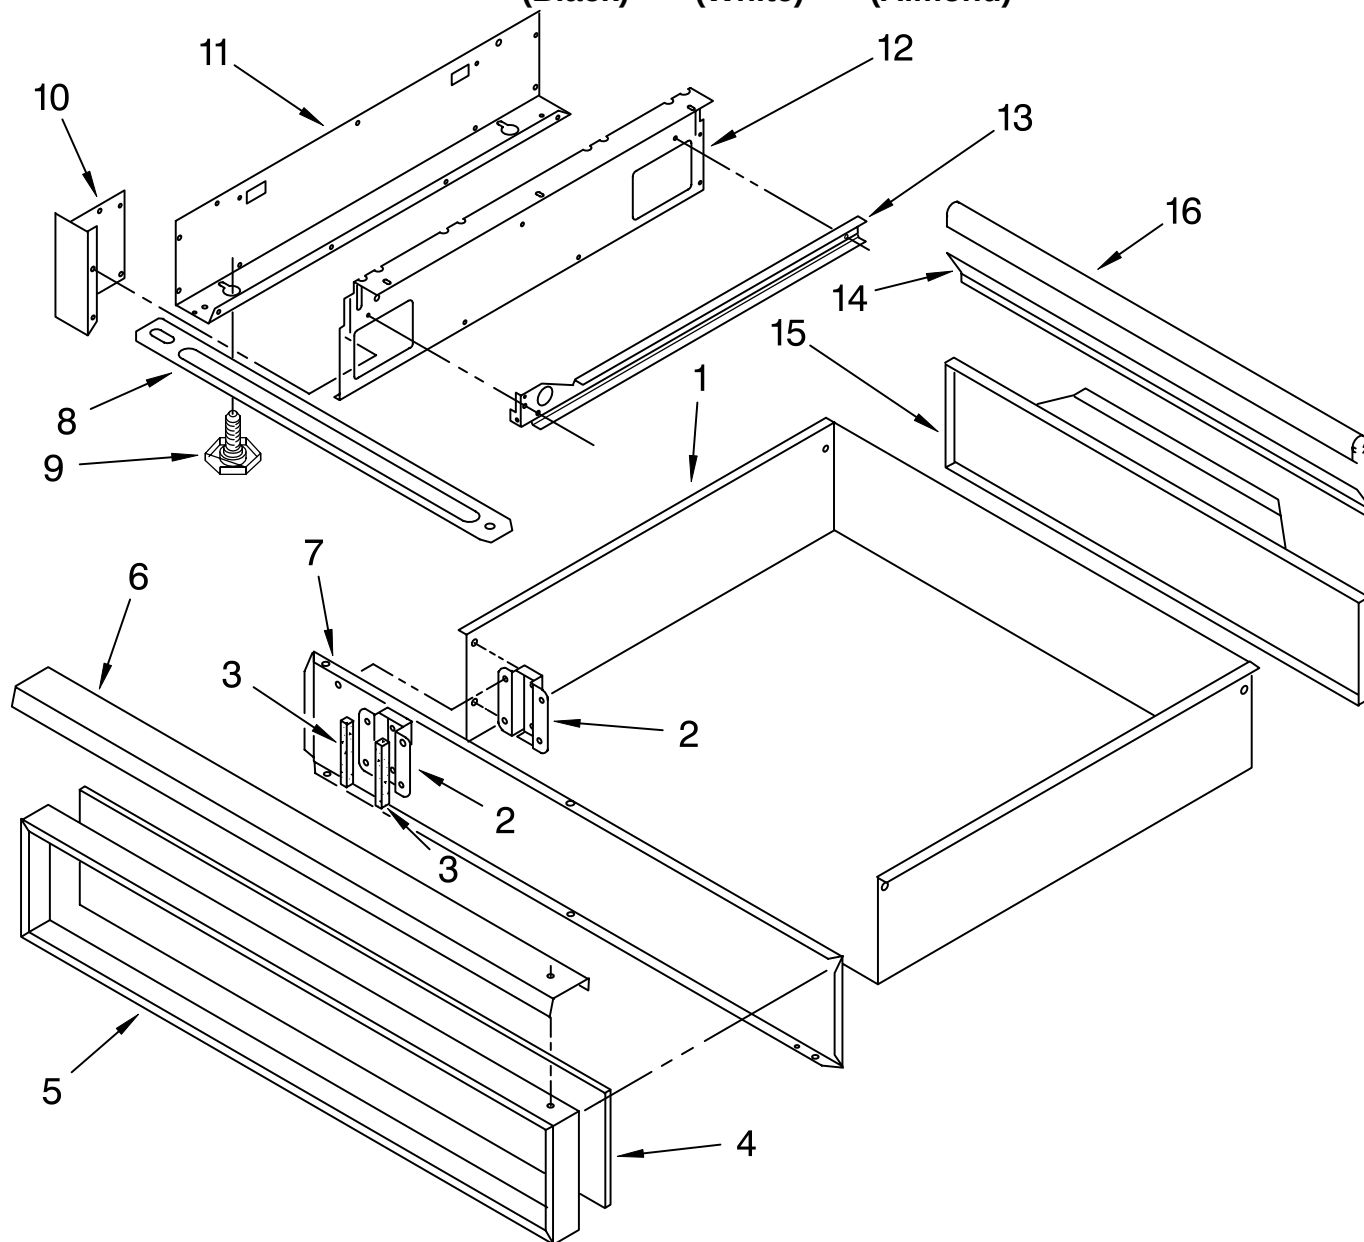

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	3183571	Drawer, Utility
2	3185163	Bracket, Mounting
3	3148107	Screw (12)
4	3147603	Seal, Foam (4)
5	3185226	Glass, Drawer Front
	3185228	Black
	3185227	White
	3185227	Almond
6	3185131	Frame, Outer
	3148107	Screw (3)
	310423	Fastener (2)


Illus. No.	Part No.	DESCRIPTION
6	3185207	Handle, Drawer Black
	3185206	White
	3185208	Almond
	309133	Screw, Black (3)
	355515	Screw, White (3)
7	3186695	Panel, Back
8	3183441	Bracket
	3148107	Screw (2)
9	312701	Foot, Range (2)
10		Cap, Front
	3185141	Right Hand
	3185142	Left Hand

Illus. No.	Part No.	DESCRIPTION
11	3185144	Support, Outer Drawer
12	3185147	Support, Inner Drawer
13		Track, Drawer
	3185210	Left Hand
	3185211	Right Hand
	3148107	Screw (11)
14	4454406	Baffle, Drip
	3148107	Screw (3)
15	3184735	Panel, Back
	3148107	Screw (4)
16	3147757	Protector, Edge

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONVECTION FAN PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

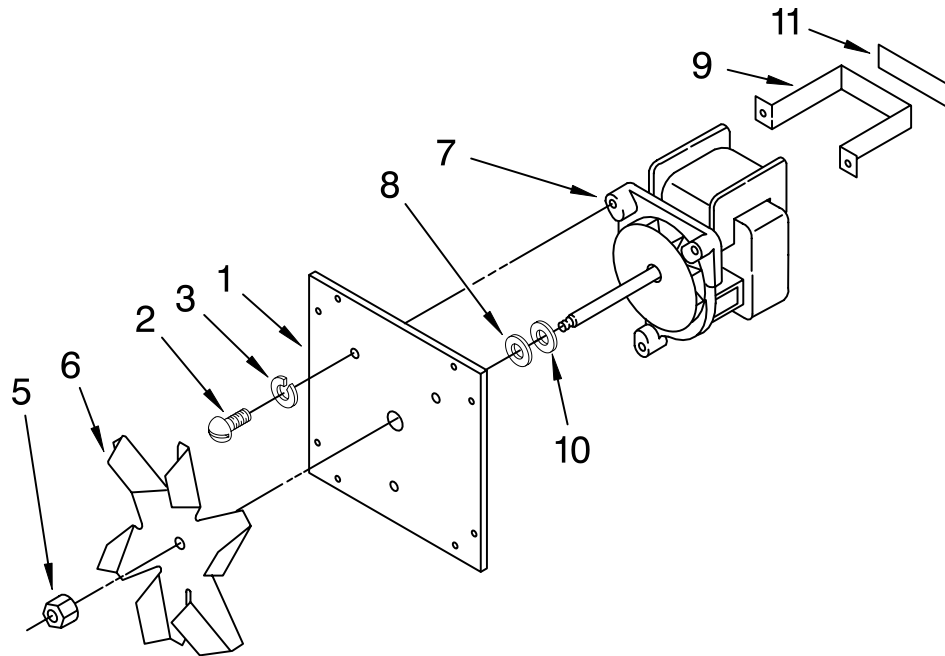


Illus. No.	Part No.	DESCRIPTION
1	3182045	Plate, Mounting (Fan Motor)
2	4173193	Screw, Fan Mounting
3	4173194	Lockwasher (3)
5	4173237	Nut, Left Hand
6	4173236	Fan
7	3183220	Motor, Fan
8	4173238	"E" Ring
9	3181750	Bracket, Guard
10	4173230	Flatwasher
11	3179790	Gasket, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: KDDT207BBL8, KDDT207BWH8, KDDT207BAL8
(Black) (White) (Almond)

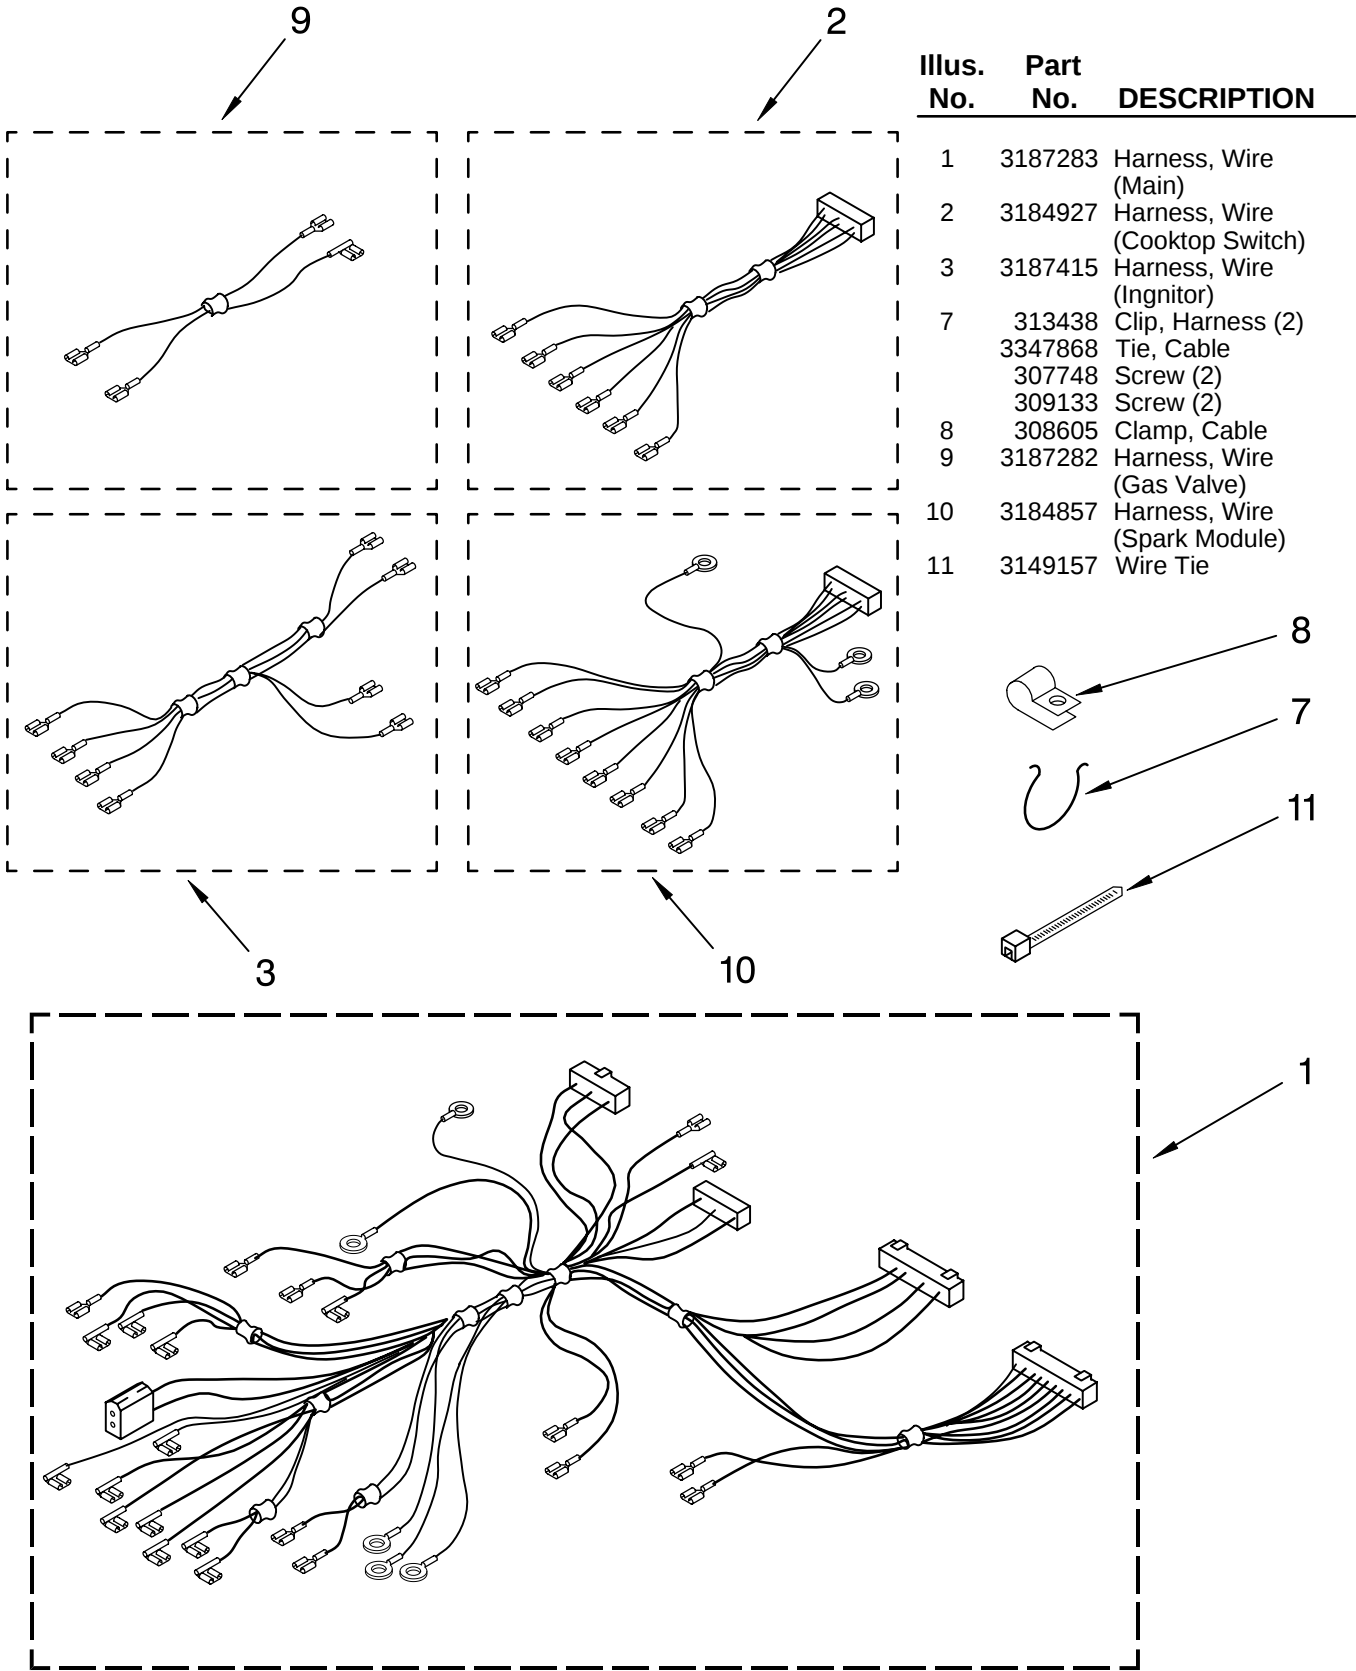

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST