




30" FREE STANDING ELECTRIC CONVECTION RANGE

MODELS:

MER8700DW1 (White)
MER8700DB1 (Black)
MER8700DH1 (White Ice)
MER8700DE1 (Black Ice)
MER8700DS1 (Stainless)


COOKTOP PARTS

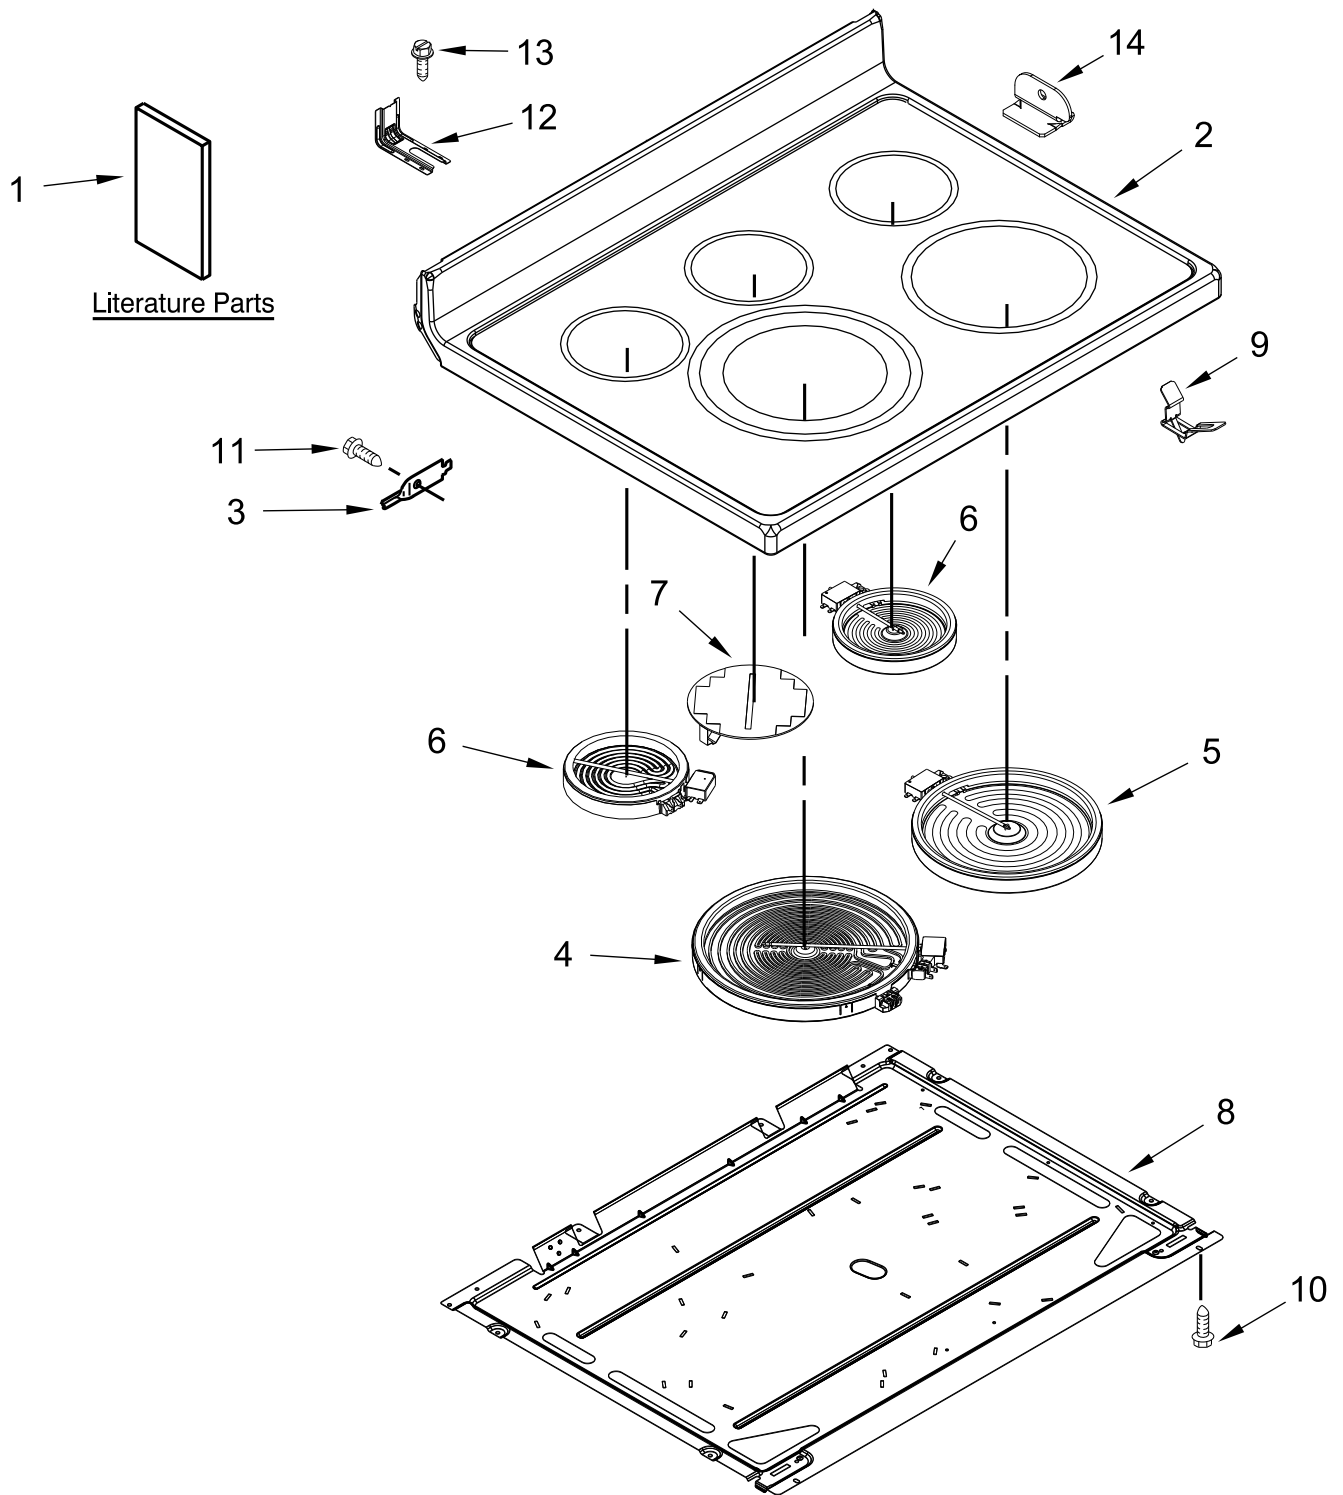

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10251108	Element (3200W)	14	W10607641	Bracket, Cooktop (Left)
	W10667165	Guide, Use and Care			(Right Front)			
	W10400064	Guide, Quick Start (English)	6	8273994	Element (1200W)		W10607642	Bracket, Cooktop (Right)
	W10667168	Sheet, Tech			(Right Rear and Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W10403811	Instructions, Installation	7	W10799047	Element, Warm Zone (Center Rear)		W10744210	Harness, Cooktop (Right)
	9762761	Tips, Safe Cooking (English)	8	W10691223	Pan, Radiant Element		W10844296	Harness, Cooktop (Left)
2		Cooktop	9	W10225448	Spring, Element		W10349714	Harness, Wire (Main)
	W10655902	White	10	3196165	Screw		W10083650	Harness, Sensor
	W10655905	Black	11	3196172	Screw		W10278580	Harness, Warm Zone
3	3195060	Hinge, Cooktop	12	W10306542	Bracket, Anti-Tip			
4	W10275048	Element (3000/1400W)	13	7101P485-60	Screw, Anti-Tip Kit			
		(Left Front)						


CONTROL PANEL PARTS

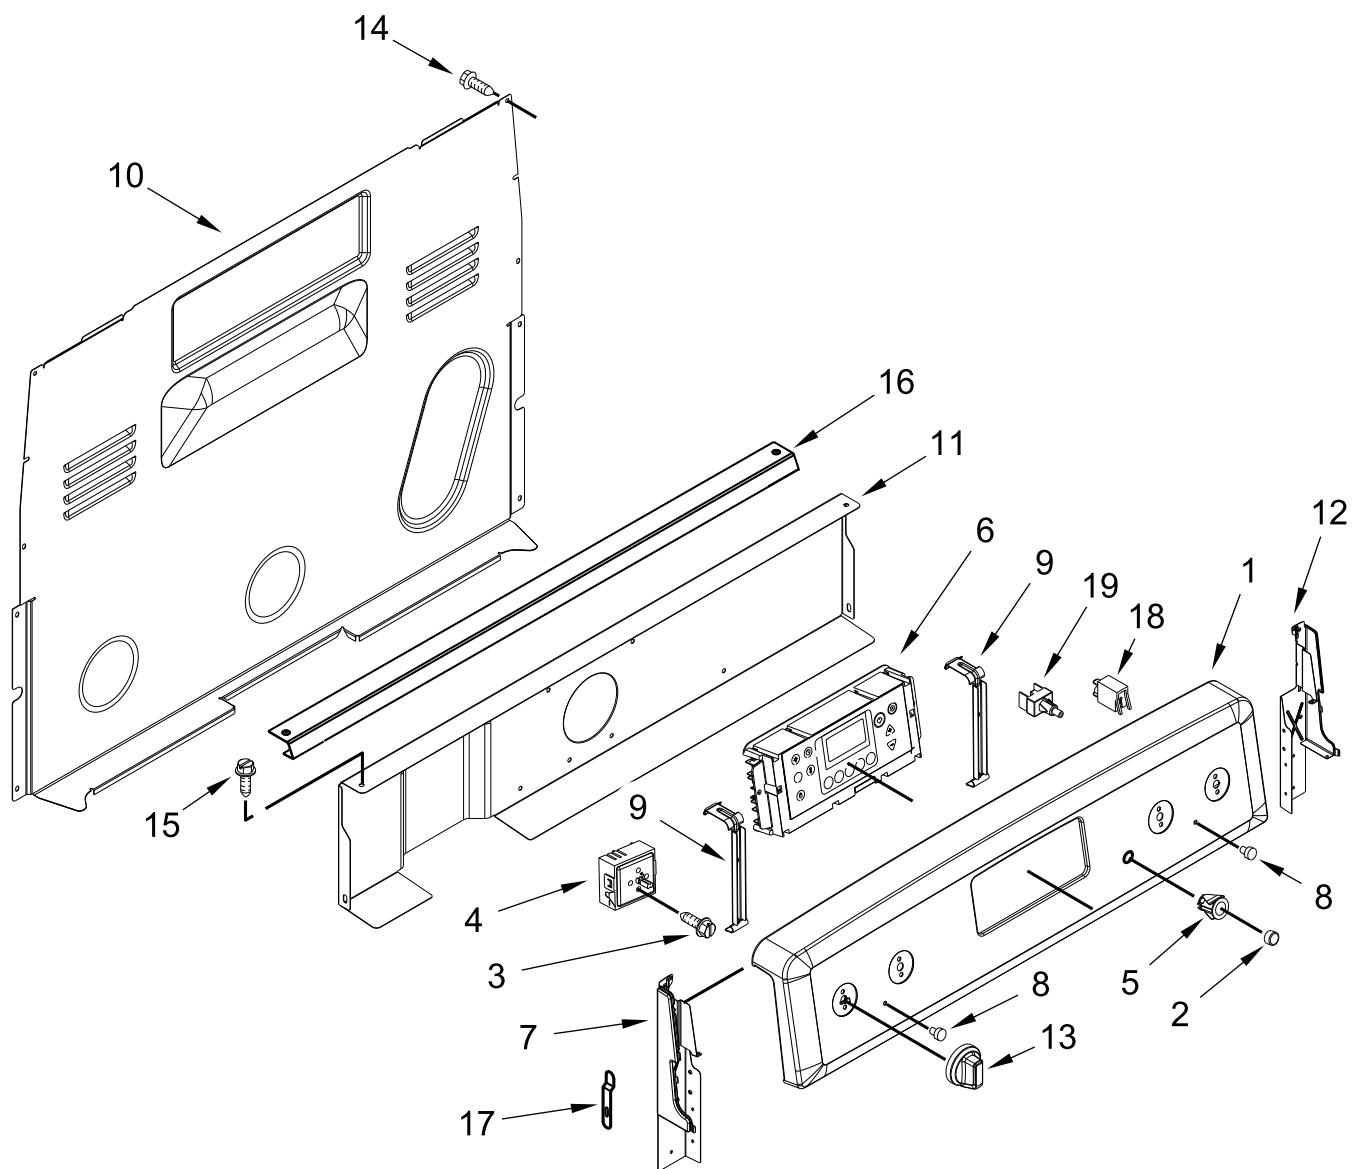

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5		Bezel, Keep Warm	12		Endcap
	W10655839	White		W10217760	White		W10184434	White (Right)
	W10655842	Black		W10217758	Black		W10184438	Black (Right)
	W10655844	Stainless		W10315960	Stainless	13		Knob
2		Button, Keep Warm	6		Control		W10666901	Stainless
	9757492	White		W10655840	White	14	3196165	Screw
	9758491	Black		W10655843	Black	15	W10362924	Screw
	W10315961	Grey		W10655845	Stainless	16	W10525121	Bracket, Console Mounting
3	3400882	Screw	7		Endcap			
4	3148951	Switch, Infinite		W10184433	White (Left)	17	3196200	Clip, Spring
		(Right Rear and Left Rear)		W10184437	Black (Left)	18	8523265	Light, Indicator (125V)
	W10434452	Switch, Infinite (Dual)	8	3196068	Lens, Indicator	19	8272820	Switch, Warm Zone
		(Left Front)	9	W10695491	Bracket, Control			
	W10411934	Switch, Infinite	10	8272473	Cover, Upper Rear			
		(Right Front)	11	W10134247	Shield, Heat			


CHASSIS PARTS

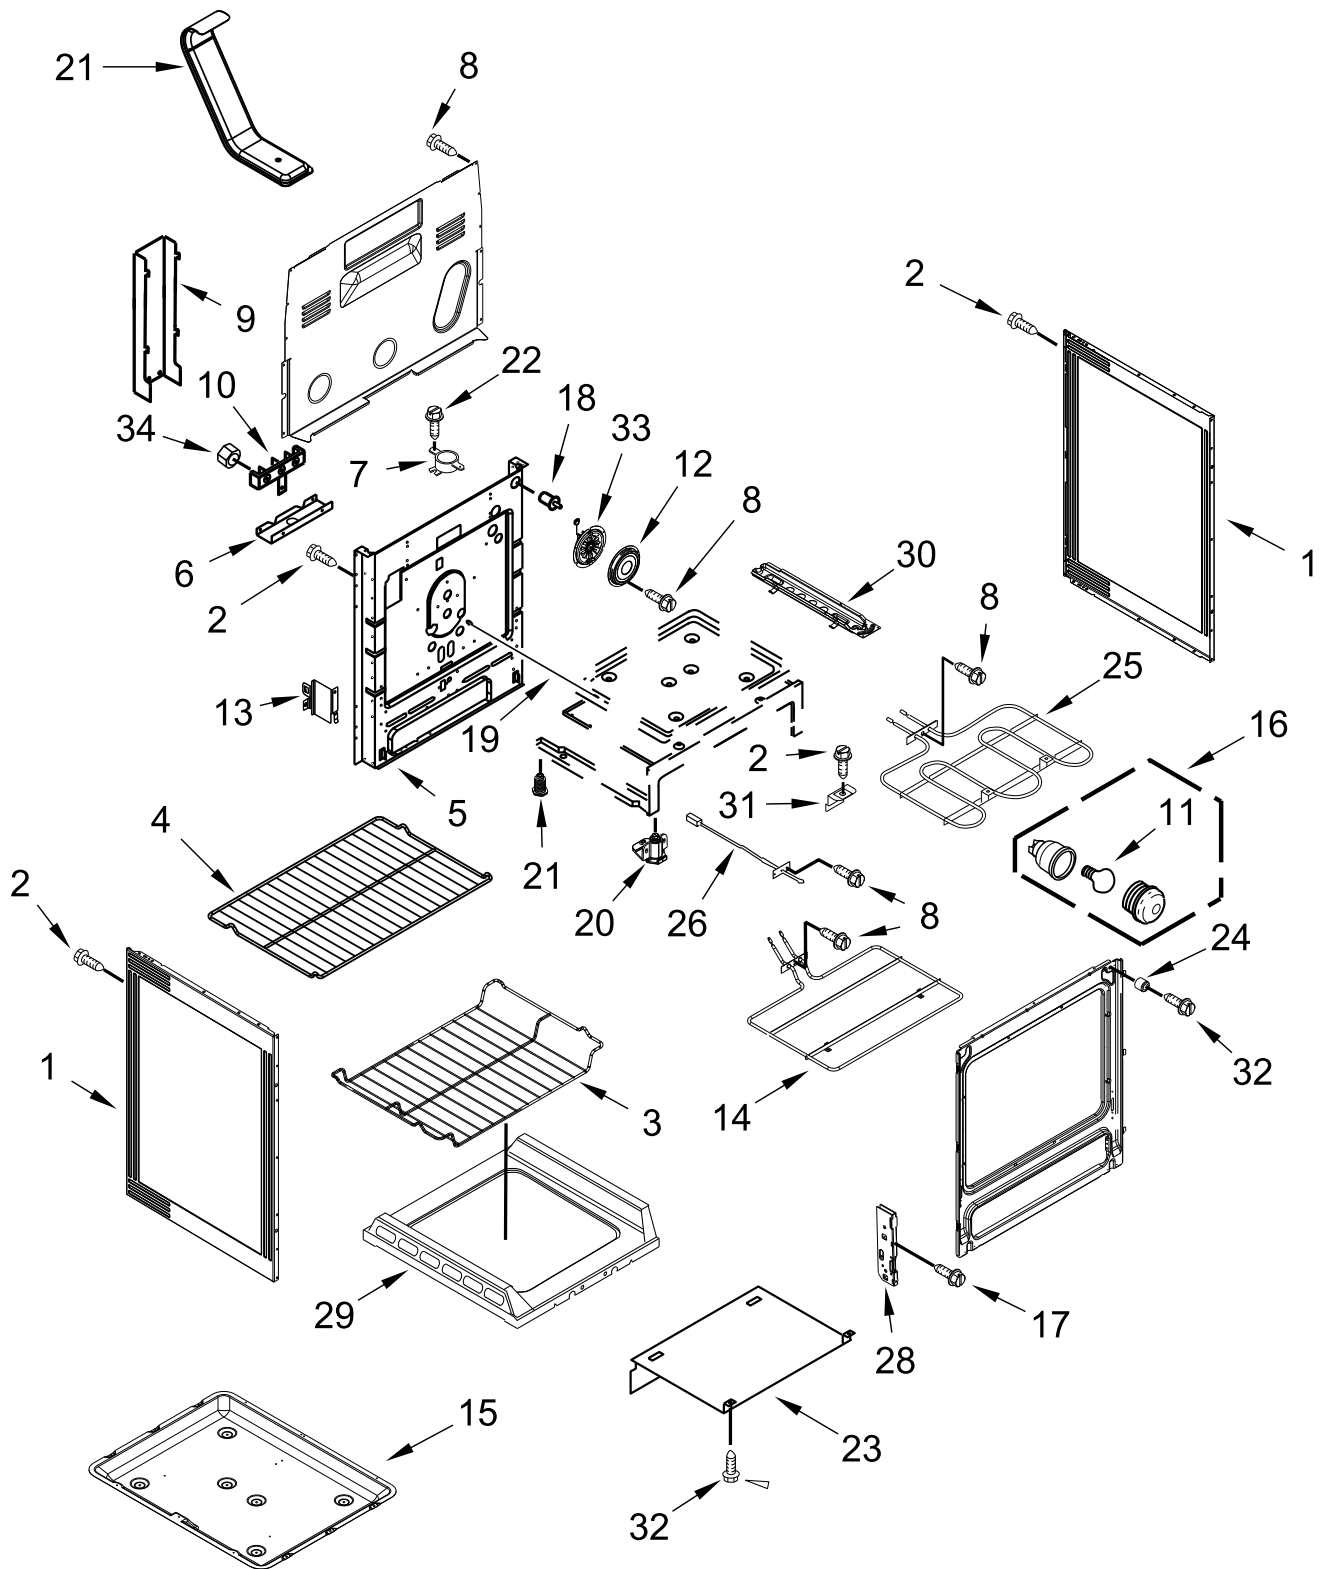

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	14	W10774342	Element, Bake	30	W10390007	Assembly, Base Rail (Right)
	W10575396	White	15	W10346147	Pan, Bake		W10390008	Assembly, Base Rail (Left)
	W10162245	Black	16	W10454648	Assembly, Light			
2	3196172	Screw	17	W10031780	Screw	31	W10035900	Support, Oven Bottom
3	W10289145	Rack, Oven (Gull-Wing)	18	W10627802	Switch, Door	32	3196165	Screw
4	W10531060	Rack, Oven	19	W10273192	Rod, Door Switch	33	W10389555	Fan, Convection
5		Back, Main (Not Serviced)	20	W10341186	Assembly, Front Foot	34	3400029	Nut
6	3186034	Bracket, Service	21	W10058460	Foot, Leveling			FOLLOWING PARTS NOT ILLUSTRATED
7	3196548	Fuse, Thermal	22	3196172	Screw			
8	W10362924	Screw	23	W10726740	Shield, Heat	W10194393		Insulation, Wrap
9	W10326122	Cover, Terminal Block	24	9758701	Spacer, Door	W10225524		Insulation, Back
10	W10245259	Block, Terminal	25	W10544951	Element, Broil	W10225523		Insulation, Bottom
11	311255	Bulb, Oven Light	26	W10586204	Sensor	W10281322		Kit, Bare Wire Adapter Block
12	W10346154	Cover, Convection	27	W10134285	Tube, Vent	4820F015-59		Insulation, Strap
13	W10273002	Bracket, Oven Support	28	W10289077	Receiver, Hinge			
			29	W10289079	Bottom, Oven			

DOOR PARTS

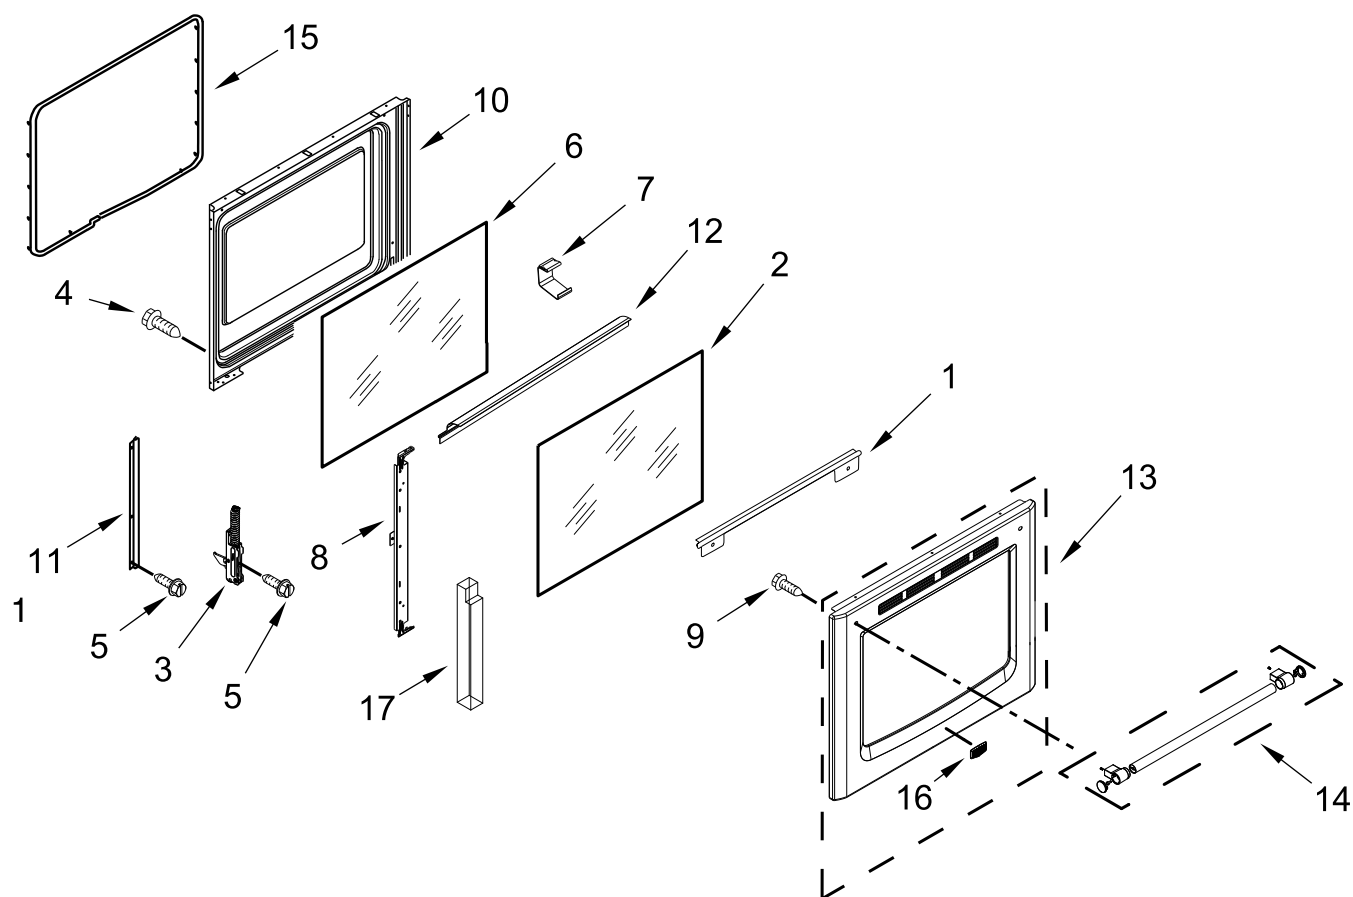


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10330075	White
	W10339814	Black
2	W10615599	Glass, Outer
3	W10388635	Hinge, Door (Active)
4	W10031790	Screw
5	W10362924	Screw
6	W10300487	Glass, Inner
7	W10137382	Clip, Panel

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10294851	Rail, Door
9	8533988	Screw
10	W10297318	Liner, Door
11	W10294852	Bracket, Glass
12	W10294853	Bracket, Glass Liner
13		Skin, Door
	W10655831	White
	W10655834	Black
	W10655838	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14		Door Handle, Assembly
	W10665830	White
	W10665829	Black
	W10665831	Stainless
15	W10162385	Gasket, Door
16	W10636267	Badge
17	W10772958	Insulation, Door

DRAWER PARTS

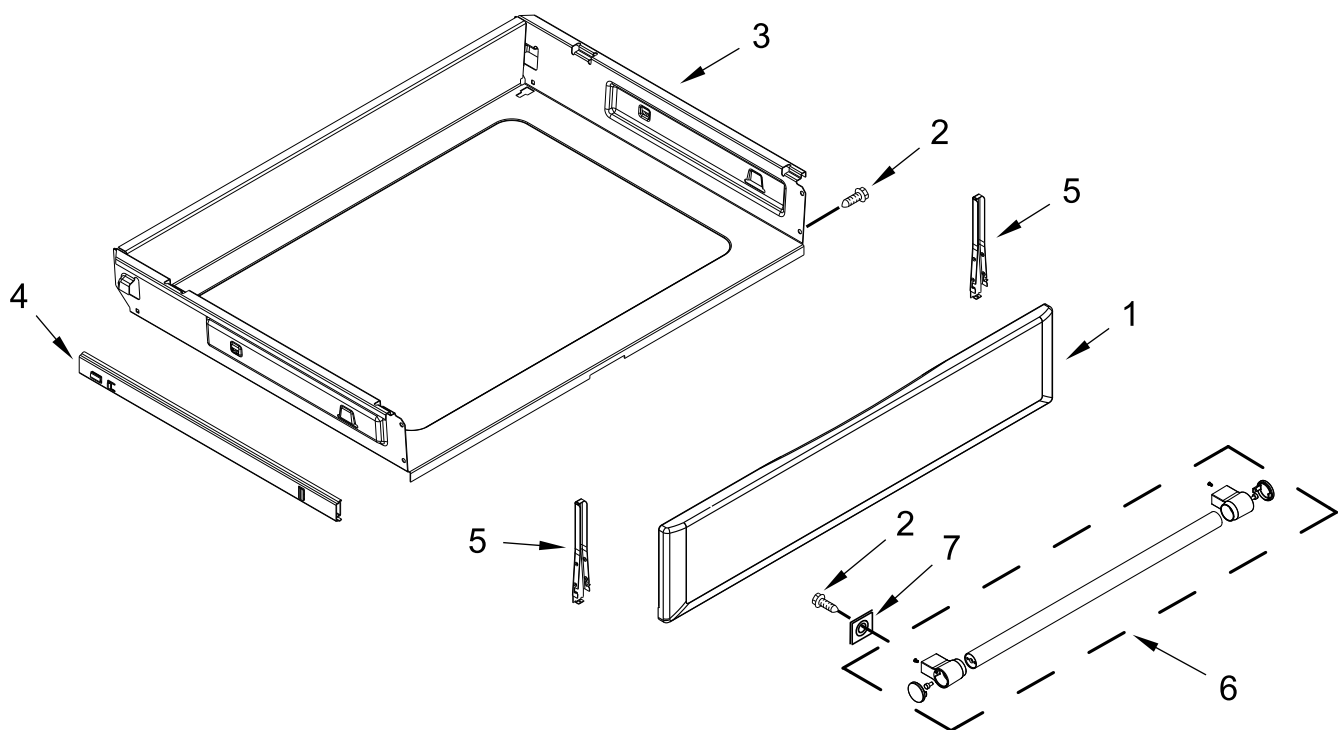

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W10667934	White
	W10667935	Black
	W10432480	Stainless
2	3196165	Screw
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Door Handle, Assembly
	W10665830	White
	W10665829	Black
	W10665831	Stainless
7	3823F017-45	Spacer, Handle

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	241430	Aluminum Foil
	3191048	Glass Cleaner

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10432019	Alt Cleaning Kit
	31605	Kit, Cooktop Care
	31463	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting