

A warning label with a black background and white text. At the top, the word "WARNING" is written in large, bold, white capital letters. Below the text, there is a white icon of a hand with a lightning bolt striking it, indicating an electrical shock hazard. The hand is shown from the side, with the index finger pointing upwards. The lightning bolt is positioned over the palm area.

Voltage Measurement Safety Information

When performing live voltage measurements, you must do the following:

- Verify the controls are in the off position so that the appliance does not start when energized.
- Allow enough space to perform the voltage measurements without obstructions.
- Keep other people a safe distance away from the appliance to prevent potential injury.
- Always use the proper testing equipment.
- After voltage measurements, always disconnect power before servicing.

ACTIVATING THE SERVICE DIAGNOSTIC MODES

1. Enter Diagnostics Mode by pressing CANCEL>CANCEL>START within 5 seconds.
2. Press the “up” arrow, the “+” (plus) key or the “3” key to scroll through the service modes to Auto Test.

ERROR CODES

Code	Description
F1E0 F1E5 F1E7 F1E9	EEPROM communication error Sensor out of range PCB thermistor open or shorted WIDE queue full
F2E0 F2E1 F2E2	Keypad disconnected Stuck key Cancel key error
F3E0	Main sensor open or shorted
F3E2	Warming drawer sensor open or shorted
F5E0	Door and switches do not agree (Clean mode - on some models)
F6E1 F6E2 F6E3	Over temperature cook Over temperature clean Over temperature (warming drawer)
F9E0	Mis-wired house or range

RESISTANCES

Component	Pinout	Resistance or Voltage
Door position switch	P7-4 to P7-5	2 VDC with door open 0 VDC with door closed
Oven light	P5-4 to WH (Neutral) P6-3	0-40 Ω nominal
Thermo fuse	P1-3 to P6-1	Closed circuit (normal)
Oven sensor	P10-1 to P10-2	1000-1200 Ω at room temperature
Bake element	P15-1 to P2-3	10-40 Ω nominal
Broil element	P15-1 to P2-4	10-40 Ω nominal
Warming drawer sensor (On some models)	P10-3 to P10-4	1000-1200 Ω at room temperature
Warming drawer element (On some models)	P4-1 to WH (Neutral) P6-3	15-20 Ω nominal
Convection fan motor	P5-3 to WH (Neutral) P6-3	85-90 Ω
Convection element (On some models)	P1-1 to WH (Neutral) P6-3	16 Ω nominal
Limiter switches	Term 2B or S to Term 1B or H	Normal = Infinite resistance
	Term Single - 1A', Dual - 4/4A or 3/1, Triple - P1 to Term 2A or 2	Normal = 0 resistance

NOTES:

- Entering Diagnostics mode will cancel any active oven operation.
- Enter the Diagnostics mode only after the oven is cool.

CAUTION:


Label all wires prior to disconnections when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

IMPORTANT: Electrostatic discharge may cause damage to machine control electronics. Refer to online Tech Manual for additional information.

Check for proper voltage by completing the following steps:

- 1. Disconnect the power or unplug the appliance.
- 2. Connect voltage measurement equipment to proper connectors.
- 3. Plug in appliance or reconnect power and confirm voltage reading.
- 4. Disconnect the power or unplug the appliance.

WIRE DIAGRAM

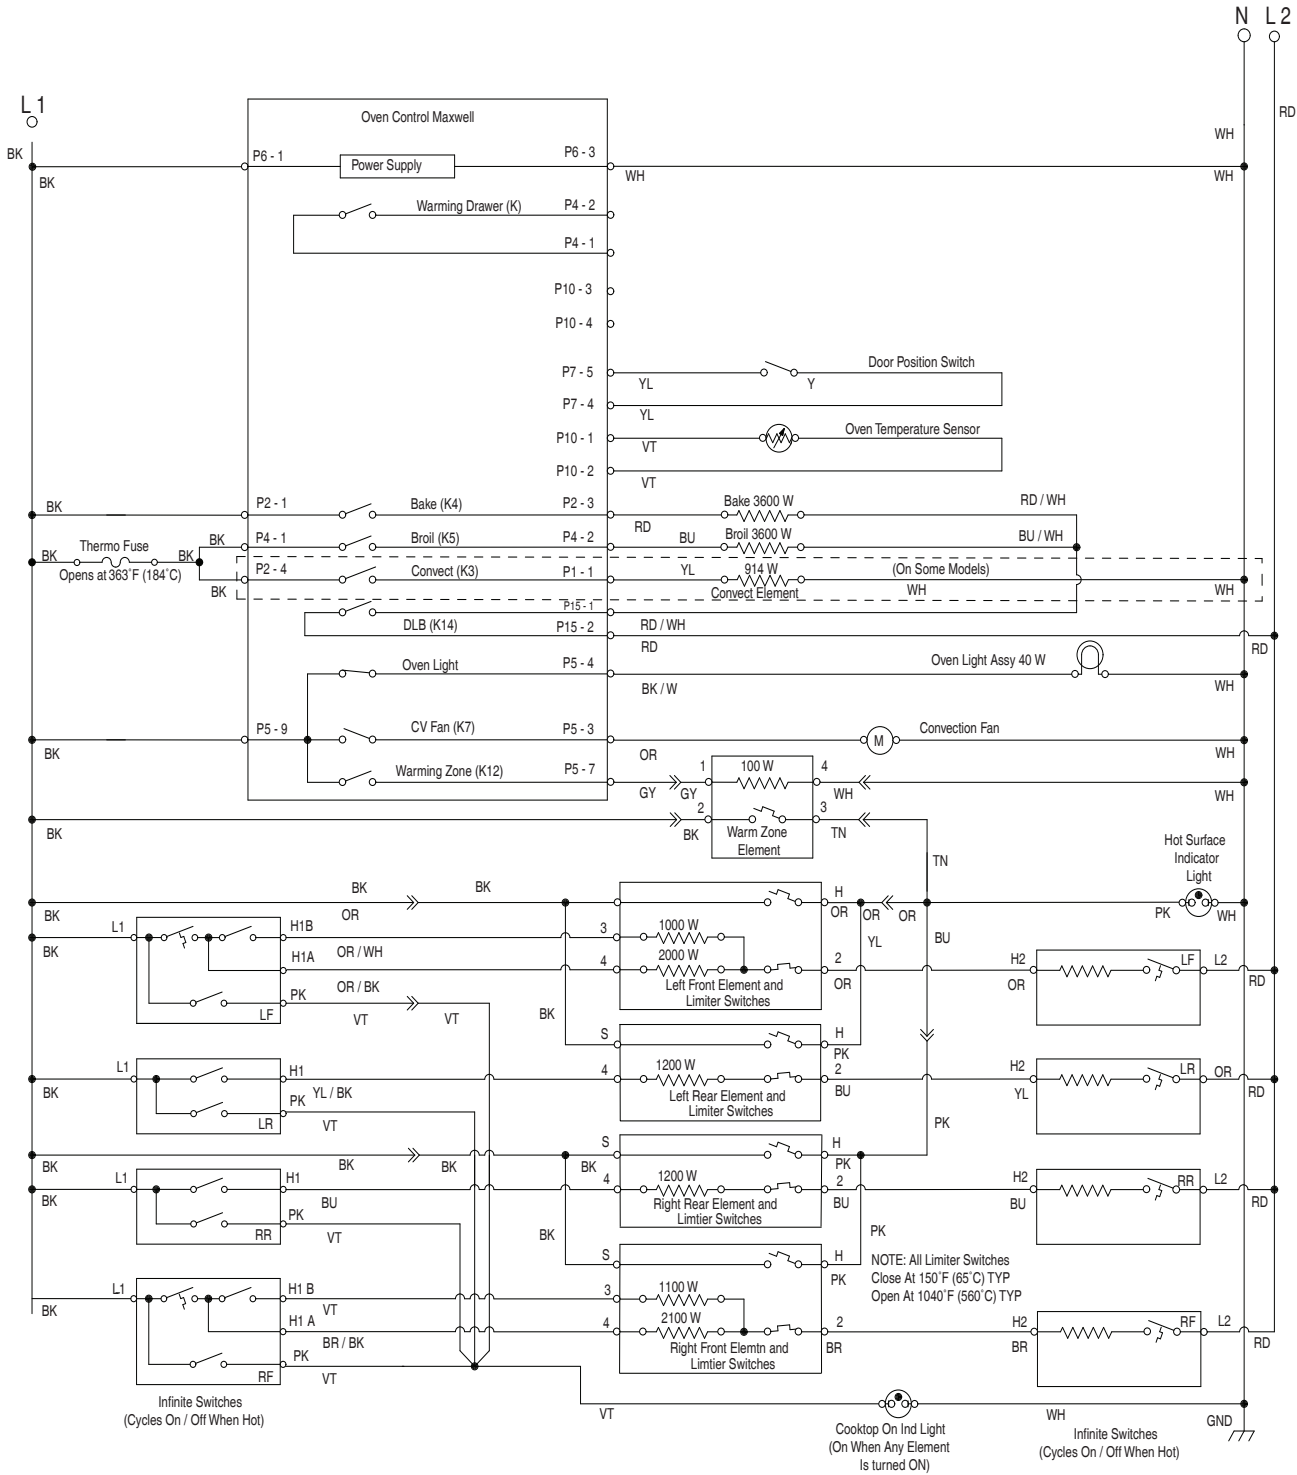

LEGEND

																		P1-2 = Connector P1, Pin 2	Multiple Functions / Circuitry Enclosed Within
--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----------------------------	--